



RCMA423AS

Residual current monitor

for monitoring AC- and (pulsed) DC-currents
in TN- and TT systems (acc. norm AS/NZS 2081:2011)





Bender GmbH & Co. KG

PO Box 1161 • 35301 Grünberg • Germany

Londorfer Strasse 65 • 35305 Grünberg • Germany

Tel.: +49 6401 807-0 • Fax: +49 6401 807-259

E-Mail: info@bender.de • www.bender.de

© Bender GmbH & Co. KG

All rights reserved.

Reprinting only with permission of the publisher.

Subject to change!

Photos: Bender archives

Table of Contents

1. Important information	5
1.1 How to use this manual	5
1.2 Technical support: service and support	6
1.2.1 First level support	6
1.2.2 Repair service	6
1.2.3 Field service	7
1.3 Training courses	7
1.4 Delivery conditions	7
1.5 Inspection, transport and storage	8
1.6 Warranty and liability	8
1.7 Disposal	9
2. Safety instructions	10
2.1 General safety instructions	10
2.2 Work activities on electrical installations	10
2.3 Intended use	11
3. Function	12
3.1 Device features	12
3.2 Function	12
3.2.1 Connection monitoring	13
3.2.2 Fast response value query	13
3.2.3 Automatic self test	13
3.2.4 Manual self test	13
3.2.5 Functional faults	14
3.2.6 Setting the number of reload cycles	14
3.2.7 Assigning alarm categories to alarm relays K1/K2	14
3.2.8 Time delays t, ton and toff	14
3.2.9 Residual current monitoring in window discriminator mode	15

3.2.10 Password protection (on, OFF)	15
3.2.11 Factory setting FAC	15
3.2.12 Erasable history memory	15
3.2.13 External, combined test/reset button T/R	15
3.2.14 Fault memory	15
4. Installation and connection	16
5. Operation and setting	18
5.1 Display elements	18
5.2 Function of the operating elements	18
5.3 Menu structure	20
5.4 Display in standard mode	21
5.5 Display in menu mode	22
5.5.1 Parameter query and setting: overview	22
5.5.2 Response value setting for overcurrent	25
5.5.3 Setting the fault memory and alarm relay operating mode	26
5.5.4 Assigning alarm categories to the alarm relays	27
5.5.5 Setting the time delays	29
5.5.6 Changeover from overcurrent to undercurrent mode or to window mode	30
5.5.7 Factory setting and password protection	30
5.5.8 Device information query	32
5.5.9 History memory query	32
5.6 Commissioning	32
6. Data	33
6.1 Factory setting	33
6.2 Error codes	34
6.3 Technical data	35
6.4 Standards, approvals and certifications	39
6.5 Ordering information	39
6.6 Document revision history	41

1. Important information

1.1 How to use this manual



*This manual is intended for **qualified personnel** working in electrical engineering and electronics!*

Always keep this manual within easy reach for future reference.

To make it easier for you to understand and revisit certain sections in this manual, we have used symbols to identify important instructions and information. The meaning of these symbols is explained below:



DANGER

*This signal word indicates that there is a **high risk of danger** that will result in **electrocution** or **serious injury** if not avoided.*



WARNING

*This signal word indicates a **medium risk of danger** that can lead to **death** or **serious injury** if not avoided.*



CAUTION

*This signal word indicates a **low level risk** that can result in **minor** or **moderate injury or damage to property** if not avoided.*



*This symbol denotes information intended to assist the user in making **optimum use** of the product.*

This manual has been compiled with great care. It might nevertheless contain errors and mistakes. Bender cannot accept any liability for injury to persons or damage to property resulting from errors or mistakes in this manual.

1.2 Technical support: service and support

For commissioning and troubleshooting Bender offers you:

1.2.1 First level support

Technical support by phone or e-mail for all Bender products

- Questions concerning specific customer applications
- Commissioning
- Troubleshooting

Telephone: +49 6401 807-760*
Fax: +49 6401 807-259
In Germany only: 0700BenderHelp (Tel. and Fax)
E-mail: support@bender-service.de

1.2.2 Repair service

Repair, calibration, update and replacement service for Bender products

- Repairing, calibrating, testing and analysing Bender products
- Hardware and software update for Bender devices
- Delivery of replacement devices in the event of faulty or incorrectly delivered Bender devices
- Extended guarantee for Bender devices, which includes an in-house repair service or replacement devices at no extra cost

Telephone: +49 6401 807-780** (technical issues)
+49 6401 807-784**, -785** (sales)
Fax: +49 6401 807-789
E-mail: repair@bender-service.de

Please send the devices for **repair** to the following address:

Bender GmbH, Repair-Service,
Londorfer Str. 65,
35305 Grünberg

1.2.3 Field service

On-site service for all Bender products

- Commissioning, configuring, maintenance, troubleshooting of Bender products
- Analysis of the electrical installation in the building (power quality test, EMC test, thermography)
- Training courses for customers

Telephone: +49 6401 807-752**, -762 ** (technical issues)
+49 6401 807-753** (sales)

Fax: +49 6401 807-759

E-mail: fieldservice@bender-service.de

Internet: www.bender.de

*Available from 7.00 a.m. to 8.00 p.m. 365 days a year (CET/UTC+1)

**Mo-Thu 7.00 a.m. - 8.00 p.m., Fr 7.00 a.m. - 13.00 p.m

1.3 Training courses

Bender is happy to provide training regarding the use of test equipment. The dates of training courses and workshops can be found on the Internet at www.bender.de > Know-how > Seminars.

1.4 Delivery conditions

Bender sale and delivery conditions apply.

For software products the "Softwareklausel zur Überlassung von Standard-Software als Teil von Lieferungen, Ergänzung und Änderung der Allgemeinen Lieferbedingungen für Erzeugnisse und Leistungen der Elektroindustrie" (software clause in respect of the licensing of standard software as part of deliveries, modifications and changes to general delivery conditions for products and services in the electrical industry) set out by the ZVEI (Zentralverband Elektrotechnik- und Elektronikindustrie e. V.) (German Electrical and Electronic Manufacturer's Association) also applies.

Sale and delivery conditions can be obtained from Bender in printed or electronic format.

1.5 Inspection, transport and storage

Inspect the dispatch and equipment packaging for damage, and compare the contents of the package with the delivery documents. In the event of damage in transit, please contact Bender immediately.

The devices must only be stored in areas where they are protected from dust, damp, and spray and dripping water, and in which the specified storage temperatures can be ensured.

1.6 Warranty and liability

Warranty and liability claims in the event of injury to persons or damage to property are excluded if they can be attributed to one or more of the following causes:

- Improper use of the device.
- Incorrect mounting, commissioning, operation and maintenance of the device.
- Failure to observe the instructions in this operating manual regarding transport, commissioning, operation and maintenance of the device.
- Unauthorised changes to the device made by parties other than the manufacturer.
- Non-observance of technical data.
- Repairs carried out incorrectly and the use of replacement parts or accessories not approved by the manufacturer.
- Catastrophes caused by external influences and force majeure.
- Mounting and installation with device combinations not recommended by the manufacturer.

This operating manual, especially the safety instructions, must be observed by all personnel working on the device. Furthermore, the rules and regulations that apply for accident prevention at the place of use must be observed.

1.7 Disposal

Abide by the national regulations and laws governing the disposal of this device. Ask your supplier if you are not sure how to dispose of the old equipment.

The directive on waste electrical and electronic equipment (WEEE directive) and the directive on the restriction of certain hazardous substances in electrical and electronic equipment (RoHS directive) apply in the European Community. In Germany, these policies are implemented through the "Electrical and Electronic Equipment Act" (ElektroG). According to this, the following applies:

- Electrical and electronic equipment are not part of household waste.
- Batteries and accumulators are not part of household waste and must be disposed of in accordance with the regulations.
- Old electrical and electronic equipment from users other than private households which was introduced to the market after 13 August 2005 must be taken back by the manufacturer and disposed of properly.

For more information on the disposal of Bender devices, refer to our homepage at www.bender.de > Service & support.

2. Safety instructions

2.1 General safety instructions

Part of the device documentation in addition to this manual is the enclosed "Safety instructions for Bender products".

2.2 Work activities on electrical installations



Only **qualified personnel** are permitted to carry out the work necessary to install, commission and run a device or system.



DANGER

Risk of electrocution due to electric shock!

Touching live parts of the system carries the risk of:

- An electric shock
- Damage to the electrical installation
- Destruction of the device

Before installing and connecting the device, make sure that the installation has been de-energised. Observe the rules for working on electrical installations.

If the device is used outside the Federal Republic of Germany, the applicable local standards and regulations must be complied with. The European standard EN 50110 can be used as a guide.

2.3 Intended use

The AC/DC sensitive residual current monitor RCMA423AS is designed for use in earthed systems (TN and TT systems) where DC and AC fault currents may occur. These are in particular loads containing six-pulse rectifiers or one way rectifiers with smoothing, such as converters, battery chargers, construction site equipment with frequency-controlled drives.

Two separately adjustable response ranges allow to distinguish between prewarning ($I_{\Delta n1} = 50 \dots 100$ % of the set response value $I_{\Delta n2}$) and main alarm ($I_{\Delta n2}$). Since the values are measured with measuring current transformers, the RCMA423AS is nearly independent of the nominal voltage and the current of the system being monitored.

In order to meet the requirements of the applicable standards, customised parameter settings must be made on the equipment in order to adapt it to local equipment and operating conditions. Please heed the limits of the range of application indicated in the technical data.

Any use other than that described in this manual is regarded as improper.

3. Function

3.1 Device features

- AC/DC sensitive residual current monitor for mining according to AS/NZS 2081:2011
- Two separately adjustable response ranges (prewarning, main alarm)
- Adjustable switching hysteresis
- r.m.s. value measurement
- Start-up delay, response delay and delay on release
- Measured value display via multi-functional LC display
- Alarm indication via LEDs (AL1, AL2) and changeover contacts (K1, K2)
- N/C operation or N/O operation selectable
- Password protection against unauthorised parameter changing
- Fault memory function can be switched off
- CT connection monitoring

3.2 Function

Once the supply voltage U_s is applied, the start-up delay is activated. Measured values changing during this time do not influence the switching state of the alarm relays. Residual current measurement takes place via external CTUB101-CTBC20...210(P) series measuring current transformers. The currently measured value is shown on the LC display. In this way any changes, for example when circuits are connected to the system, can be recognised easily. When the measured values exceed the response values, the response delays $t_{on1/2}$ begin.

Once the response delay " $t_{on1/2}$ " has elapsed, the "K1/K2" alarm relays switch and the alarm LEDs "AL1/AL2" light up. If the residual current falls below the release value (response value minus hysteresis), the delay on release t_{off} begins. Once t_{off} has elapsed, the alarm relays return to their initial position and the alarm LEDs AL1/AL2 go out.

If the fault memory is activated, the alarm relays remain in the alarm state and the LEDs light until the reset button is pressed or until the supply voltage is interrupted. The device function can be tested using the test button. The parameterisation of the device can be carried out via the LC display and the control keys integrated in the front plate and can be password-protected.

3.2.1 Connection monitoring

The CT connections are continuously monitored. In the event of a fault, the alarm relays K1 / K2 switch without delay, the alarm LEDs AL1 / AL2 / ON flash (Error Code E.01). After eliminating the fault, the alarm relays automatically return to their initial position, provided that the fault memory M is deactivated. With the fault memory activated, K1/K2 return to their initial position by pressing the reset button "R". A second cascaded measuring current transformer will not be monitored.

3.2.2 Fast response value query

With the display in standard mode, the currently measured response values $I_{\Delta n1}$ and $I_{\Delta n2}$ can be queried pressing the Up and Down keys (< 1.5 s). Switchover to the Menu mode is not required. If you want to exit the fast response value query, press the enter key.

3.2.3 Automatic self test

The device automatically carries out a self test after connecting to the system to be monitored and later every 24 hours. During the self test internal functional faults will be detected and appear in form of an error code on the display. The alarm relays are not checked during this test.

3.2.4 Manual self test

After pressing the test button for > 1.5 s, the device carries out a self test. During this test, internal functional faults are detected and will be displayed in form of an error code. The alarm relays are not checked during this test. While the test button "T" is pressed and held down, all device-related display elements appear on the display.

3.2.5 Functional faults

If an internal functional fault occurs, all of the three LEDs flash. An error code will appear on the display (E01...E32). In such a case please contact the Bender Service.

3.2.6 Setting the number of reload cycles

If faults occur only temporarily, but recurrently, in the system being monitored, with the fault memory M deactivated, the alarm relays would switch synchronously to the error status.

RL in the out menu can be used to limit the number of these changeover processes. As soon as the preset number of switching cycles is exceeded, the fault memory will come on and an activated alarm remains stored.

3.2.7 Assigning alarm categories to alarm relays K1/K2

The alarm categories device error, residual current $I_{\Delta n1}$, residual current $I_{\Delta n2}$ or alarm by device test can be assigned to the alarm relays via the "out" menu.

3.2.8 Time delays t , t_{on} and t_{off}

The times t , t_{on} and t_{off} , described below, delay the output of alarms via LEDs and relays.

Start-up delay t

After connection to the supply voltage U_s , the alarm indication is delayed by the preset time t (0...10 s).

Response delay $t_{on1/2}$

If the residual current increases above or falls below the response value, the residual current monitor needs the response time t_{an} before it signals an alarm. A set response delay $t_{on1/2}$ (0...10 s) adds up to the device-related operating time t_{ae} and delays alarm signalling (total delay time $t_{an} = t_{ae} + t_{on}$).



In order to comply with the disconnection time of $\leq 50ms$ required by AS/NZS 2081:2011, the response delay $t_{on1/2}$ has to be set to 0 seconds (factory setting).

If the residual current fault does not continue to exist, an alarm will not be signalled.

Delay on release t_{off}

When no alarm exists after deactivating the fault memory, the alarm LEDs go out and the alarm relays switch back to their initial position. After activating the delay on release, the alarm state is continuously maintained for the selected period.

3.2.9 Residual current monitoring in window discriminator mode

Change the measuring principle by selecting the window mode (SEt / In). In the window discriminator mode, the threshold values I1 and I2 represent the upper and the lower value. If the measured value is not within this area, an alarm is initiated by the device. See page 32.

3.2.10 Password protection (on, OFF)

When the password protection is activated (on), settings are only possible after entering the correct password (0...999).

3.2.11 Factory setting FAC

After activating the factory setting, all settings previously changed are reset to delivery status.

3.2.12 Erasable history memory

The first alarm value that occurs will be saved in this memory. The memory can be cleared via the menu HiS.

3.2.13 External, combined test/reset button T/R

Reset = Pressing the external button < 1.5 s

Test = Pressing the external button > 1.5 s

3.2.14 Fault memory

The fault memory can be activated, deactivated or set to continuous mode (con). If the fault memory is set to "con" mode, the alarm parameters remain stored even on failure of the supply voltage. Stored alarms can be reset by means of the reset button R.

4. Installation and connection



Only **qualified personnel** are permitted to carry out the work necessary to install, commission and run a device or system.



DANGER


Risk of electrocution due to electric shock!

Touching live parts of the system carries the risk of:

- An electric shock
- Damage to the electrical installation
- Destruction of the device

Before installing and connecting the device, make sure that the installation has been de-energised. Observe the rules for working on electrical installations.

Dimension diagram, drawing for screw mounting, push-wire terminal connection

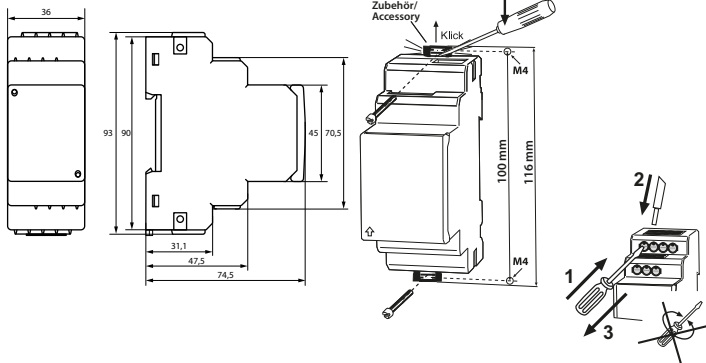

The front plate cover is easy to open at the lower part marked by an arrow.

1. DIN rail mounting:


Snap the rear mounting clip of the device into place in such a way that a safe and tight fit is ensured.

Screw mounting:

Use a tool to move the rear mounting clips (a second mounting clip required, see ordering information) to a position that it projects beyond the enclosure. Then fix the device using two M4 screws.

2. Wiring

Connect the device according the wiring diagram. Observe the manuals of the respective measuring current transformer


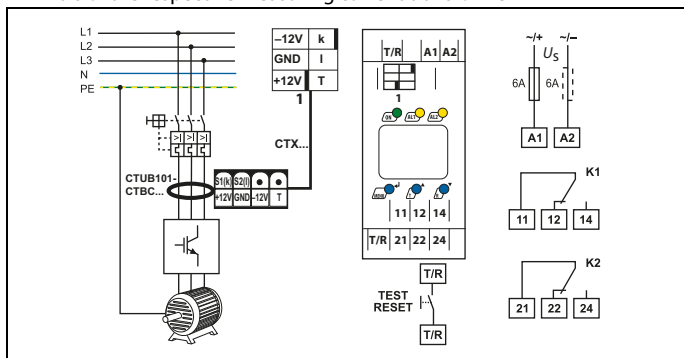



Terminal	Connections
A1, A2	Connection for supply voltage U_s
1	Socket for the connecting cable CTX... to the measuring current transformer
T/R	Connection for combined test and reset button
11, 12, 14	Alarm relay K1
21, 22, 24	Alarm relay K2


5. Operation and setting

5.1 Display elements

 A detailed description of the meaning of the display elements in use is given in the table below.

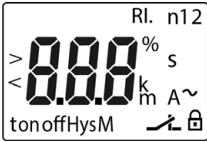

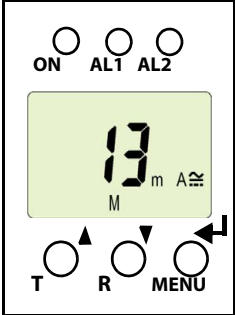

Display elements in use	Element	Function
	RL	Reload function with memory = off (L = I.)
	I2	Response value $I_{\Delta n2}$ as mA (Alarm 2, main alarm)
	I1	Response value $I_{\Delta n1}$ as % of $I_{\Delta n2}$ (Alarm 1, prewarning)
	r1, 1 r2, 2	Alarm relay K1 Alarm relay K2
	I Hys, %	Response value hysteresis as %.
	ton1, ton2, t, toff	Response delay t_{on1} (K1) Response delay t_{on2} (K2) Start-up delay t , Delay on release t_{off} for K1, K2
	M	Fault memory active
		Operating principle of the alarm relays
		Password protection enabled


5.2 Function of the operating elements

Device front	Element	Function
	ON, green	Lighting continuously: Power On Flashing: system fault or connection monitoring fault
	AL1, AL2	LED Alarm 1 lights (yellow): Response value 1 reached ($I_{\Delta n1}$) LED Alarm 2 lights (yellow): Response value 2 reached ($I_{\Delta n2}$)
	13 mA M	13 mA flow through the measuring current transformer, fault memory active
	T, ▲	Test button (> 1.5 s): to indicate the display elements in use, to start a self test; Up key (< 1.5 s): Menu items/values
	R, ▼	Reset button (> 1.5 s): Deleting the fault memory; Down key (< 1.5 s): Menu items/values
	MENU, ◀	MENU key (> 1.5 s): Starting the menu mode; Enter key (< 1.5 s): Confirm menu item, submenu item and value. Enter key (> 1.5 s): Back to the next higher menu level.

5.3 Menu structure


All adjustable parameters are listed in the columns "menu item" and "adjustable parameters". A display-like representation is used to illustrate the parameters in the column menu item. Different alarm categories can be assigned to the alarm relays K1, K2 via the submenus r1, r2. This is done by activation or deactivation of the respective function.

Menu	Sub Menu	Menu item	Activation	Adjustable parameter
AL (response - values)		> I2	- (Hi)	$I_{\Delta n2}$ (Alarm 2, main alarm)
		> I1	- (Hi)	$I_{\Delta n1}$ as % of $I_{\Delta n2}$ (Alarm 1, prewarning)
		Hys	-	Hysteresis $I_{\Delta n1} / I_{\Delta n2}$
out (output control)		M	ON	Fault memory (on/off/con)
		 1	-	Operating mode K1 (n.c.)
		 2	-	Operating mode K2 (n.c.)
		RL	-	Reload function (memory = off)
	r1 (K1: (assignment alarm category))	1 Err	ON	Device error at K1
		r1 I1	ON	Prewarning $I_{\Delta n1}$ at K1
		r1 I2	off	Main alarm $I_{\Delta n2}$ at K1
		1 tES	ON	Device test
	r2 (K2: (assignment alarm category))	2 Err	ON	Device error at K2
		r2 I1	off	Prewarning $I_{\Delta n1}$ at K2
		r2 I2	ON	Main alarm $I_{\Delta n2}$ at K2
		2 tES	ON	Device test

Menu	Sub Menu	Menu item	Activation	Adjustable parameter
t (timing check)	→	t on 1	-	Response delay K1
		t on 2	-	Response delay K2
		T	-	Start-up delay
		t off	-	Delay on release K1/K2
Set (device control)	→	I 12	HI	Selectable parameters: High, window function, low
			off	Parameter setting via password
		FAC	-	Restore factory settings
		SYS	-	Function blocked
InF	→		-	Display hard / software version
HiS	→	Clr	-	History memory for the first alarm value, erasable

5.4 Display in standard mode

 By default, the currently measured residual current is displayed. The current response values I1 (prewarning) and I2 (main alarm) can be displayed using the Up and Down key. Press the Enter key to return to the measured value.




In the standard mode, the currently set response values I1 and I2 can be displayed using the Up and Down keys.

5.5 Display in menu mode

5.5.1 Parameter query and setting: overview

Menu item	Adjustable parameter
AL	Response values query and setting: <ul style="list-style-type: none"> - Residual current I2 ($I_{\Delta n2}$) (AL2) - Residual current I1 ($I_{\Delta n1}$) (AL1) - Hysteresis of the response values: % Hys
out	Configuration of the fault memory and the alarm relay: <ul style="list-style-type: none"> - Activate/deactivate the fault memory or assign continuous mode (on/off/con) - Select N/O operation (n.o.) or N/C operation (n.c.) individually for each K1/K2 - Specify the number of the reload cycles - Assign the alarm category I1 ($I_{\Delta n1}$) or I2 ($I_{\Delta n2}$), relay test or device error individually to K1/K2 (1, r1/ 2, r2).
t	Set delays: <ul style="list-style-type: none"> - Response delay t_{on1}/t_{on2} - Start-up delay t - Delay on release t_{off} (LED, relay)
SEt	Device control parameter setting: <ul style="list-style-type: none"> - Select the appropriate parameter for response values: overcurrent mode (HI), undercurrent mode (Lo) or window mode (In). - Enable or disable password protection, change the password. - Restore factory settings. - Service menu SyS blocked
InF	Query hard and software version
HiS	Query the first stored alarm value
ESC	Move to the next higher menu level (back)

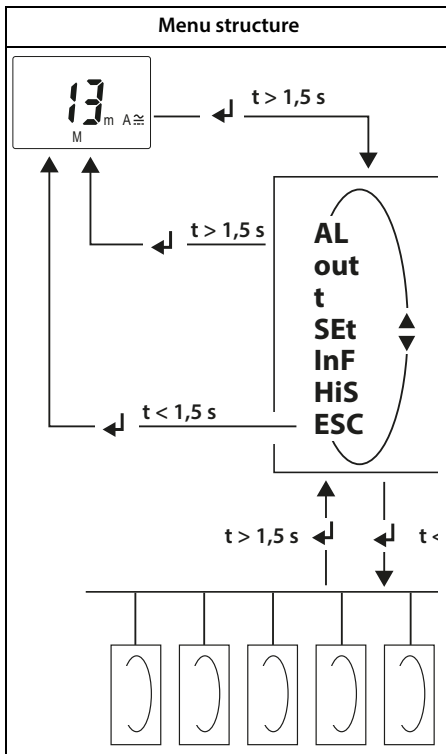

5.6 Parameter settings

An example is given here on how to change the alarm response value I1 ($I_{\Delta n1}$). It is presumed that the option overcurrent (HI) has been selected in the SEt/I 12 menu (factory setting). Proceed as follows:

1. Press the MENU/Enter key for more than 1.5 seconds. The flashing short symbol AL appears on the display.
2. Confirm with Enter. The parameter response value $> I2$ flashes, in addition the associated overcurrent value > 100 mA appears.
3. Use the Down key to select the parameter response value I1. The parameter I1 flashes, in addition the associated percentage value for prewarning 50 % of I2 appears.
4. Confirm with Enter. The current value for prewarning appears on the flashing display.
5. Use the Up or Down key to set the appropriate prewarning value. Confirm with Enter. I1 flashes.
6. You can exit the menu by:
 - pressing the Enter key for more than 1.5 seconds to reach the next higher level or
 - selecting the menu item ESC and confirming with Enter to reach the next higher level.




The currently active segments are flashing! In the figures below, the segments where device settings can be carried out are highlighted by an oval. The menu mode can be reached by pressing the MENU key for more than 1.5 seconds.


5.6.1 Response value setting for overcurrent

- Response value I2 (overcurrent $I_{\Delta n2}$)
- Response value I1 (overcurrent $I_{\Delta n1}$)
- Hysteresis (Hys) of the response values $I_{\Delta n1}$, $I_{\Delta n2}$


Increasing the response value I2 (main alarm overcurrent)

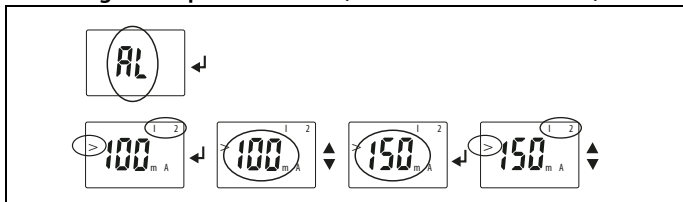

Increasing the response value I1 (prewarning overcurrent)

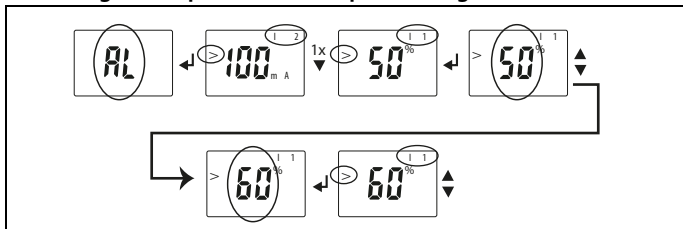


Setting the hysteresis of the response value

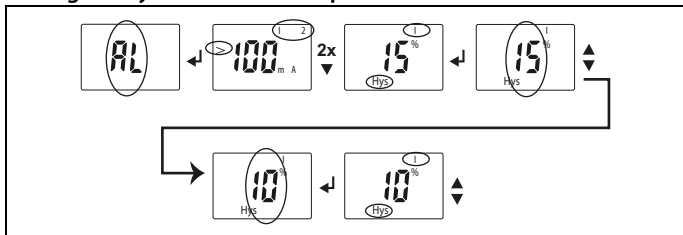


5.6.2 Setting the fault memory and alarm relay operating mode


Setting the fault memory to con mode

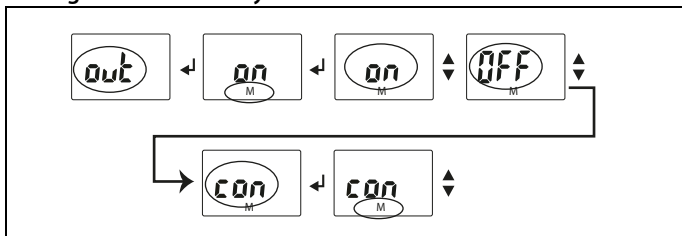

Setting the alarm relay K1 to N/O operation (n.o.)

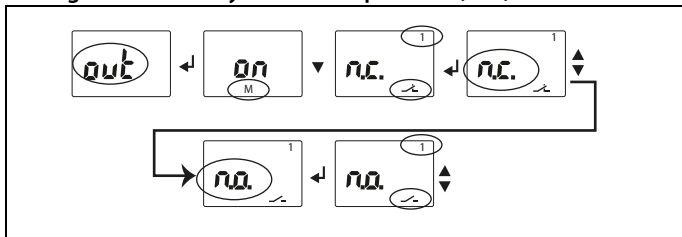

Setting the number of reload cycles

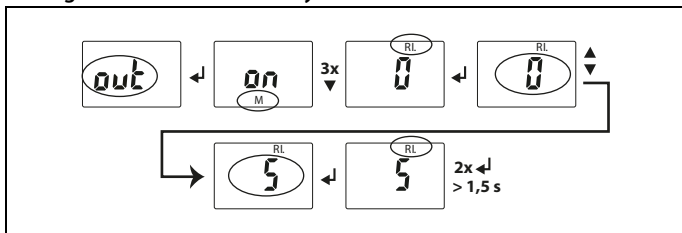

5.6.3 Assigning alarm categories to the alarm relays

The following messages can be assigned to the alarm relays K1 (r1) and K2 (r2):


- Device error
- Response value I1 exceeded
- Response value I2 exceeded
- Test

The factory setting is:


K1 (r1): Response value I2 exceeded

K2 (r2): Device error


Alarm relay K1: Deactivating the category device error

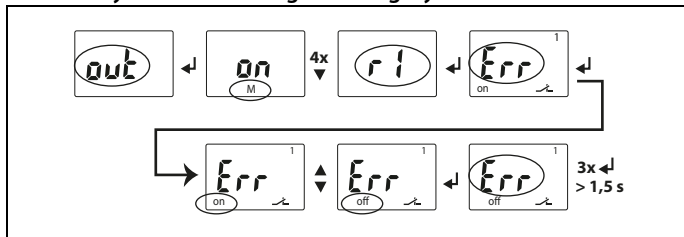


Alarm relay K1: Deactivating the category response value I1

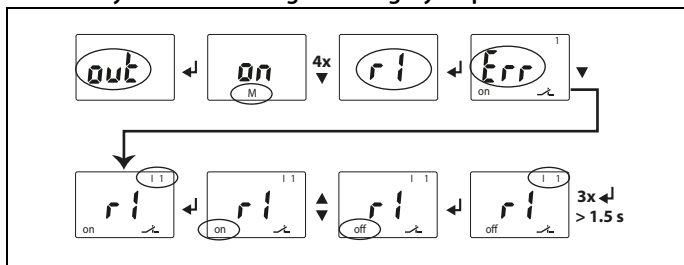

Alarm relay K1: Activating the category response value I2

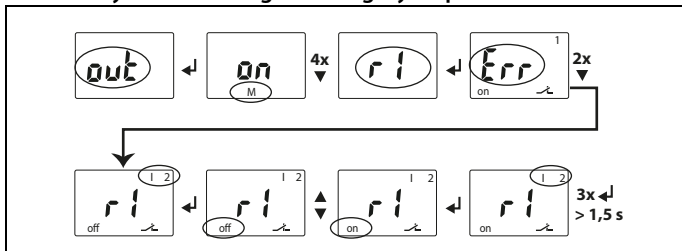

Alarm relay K1: Deactivating the category "Alarm by device test"

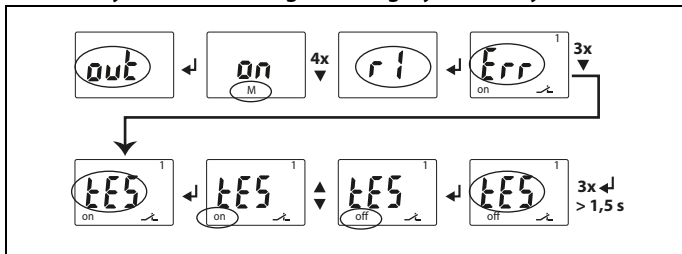
WARNING

When an **alarm relay (K1/K2)** has been deactivated in the menu, an **alarm will not be signalled by the respective changeover contact!** An alarm will only be indicated by the respective alarm **LED (AL1/AL2)**!

5.6.4 Setting the time delays

The following delays can be set:


- Response delay t_{on1} (0...10 s) for K1, and t_{on2} (0...10 s) for K2
- Start-up delay t (0...10 s) when the device is being started
- Common delay on release t_{off} (0...300 s) for K1, K2. The setting t_{off} is only relevant when the fault memory M is deactivated.




In order to comply with the disconnection time of ≤ 50 ms required by AS/NZS 2081:2011, the response delay $t_{on1/2}$ has to be set to 0 seconds (factory setting).

The operating steps for the setting of the response delay t_{on1} and the starting delay t are illustrated by way of example.

Setting the response delay t_{on1}

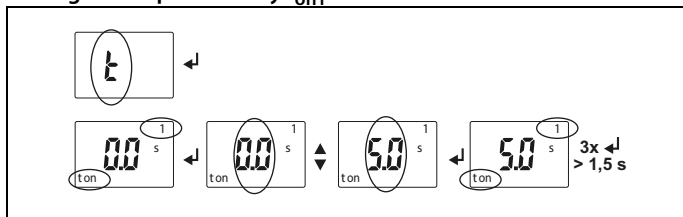

Setting the start-up delay t

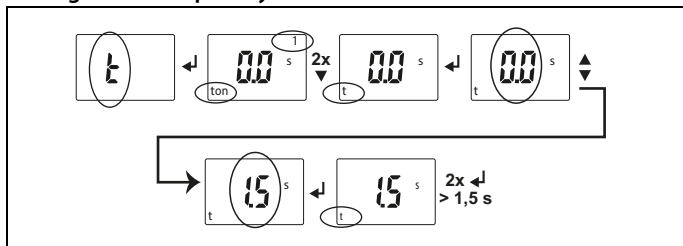


5.6.5 Changeover from overcurrent to undercurrent mode or to window mode

The operating mode can be changed in the SEt/I 12 menu using the parameters HI, Lo and In. By default, overcurrent operation (HI) is set.

Changing from overcurrent operation to window operation


Use this menu item to set whether the response values of the device apply to overcurrent (HI) or undercurrent operation (Lo). In addition, window operation (In) can be selected.

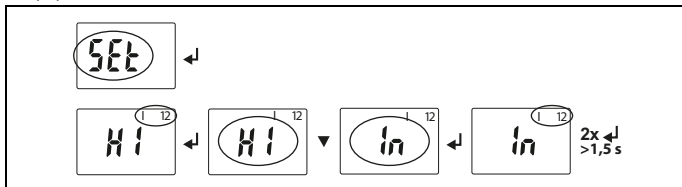


5.6.6 Factory setting and password protection

Use this menu to activate the password protection, to change the password or to deactivate the password protection. In addition, you can reset the device to its factory settings.


a) Activating the password protection

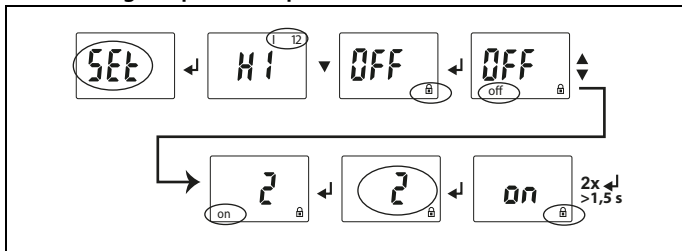


b) Changing the password

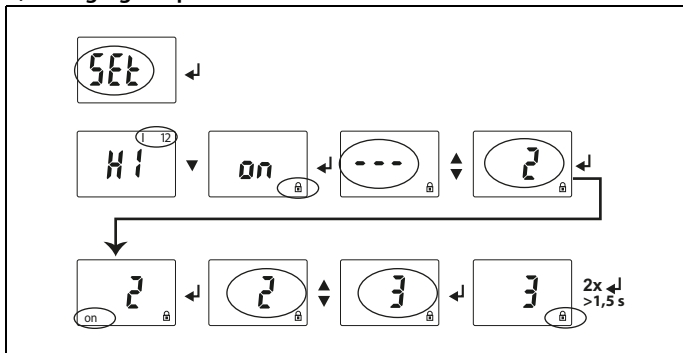

c) Deactivating the password protection

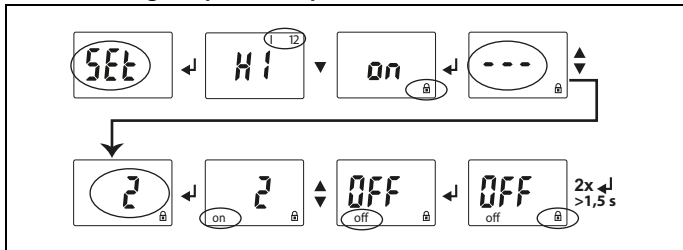


Restoring factory settings

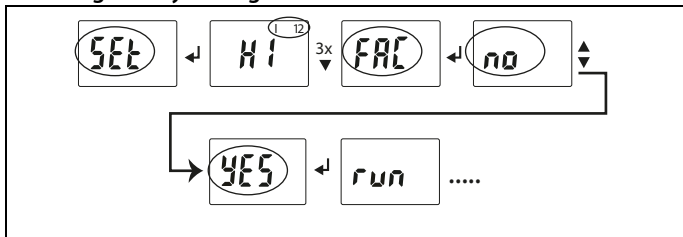


5.6.7 Device information query

 This function is used to query the software version (1.xx). After activating this function, data will be displayed as a scrolling text. Once one pass is completed you can select individual data sections using the Up/Down keys.



5.6.8 History memory query

 The history memory can be selected via the menu HiS. Use the Up and Down keys to view the next display. If Clr is flashing, the history memory can be cleared by pressing the Enter key.



5.7 Commissioning

Prior to commissioning, check proper connection of the residual current monitor.

6. Data

6.1 Factory setting



<i>Response value</i>	
- overcurrent I1 (prewarning)	50 mA (50 % of I2)
- overcurrent I2 (main alarm)	100 mA
<i>Hysteresis</i>	15 %
<i>Fault memory M</i>	activated (on)
<i>Message K1</i>	Overcurrent I2
<i>Message K2</i>	Device error
<i>Start-up delay</i>	$t = 0.5 \text{ s}$
<i>Response delay</i>	$t_{on1} = 0 \text{ s} (\leq 50 \text{ ms})$ $t_{on2} = 0 \text{ s}$
<i>Delay on release</i>	$t_{off} = 1 \text{ s}$
<i>Password</i>	0, deactivated (Off)

6.2 Error codes

Should, contrary to all expectations, a device error occur, error codes will appear on the display. Typical error codes are described below:

Error code	Meaning:
E.01	Fault CT connection monitoring Appropriate action: Check CT connection for short-circuit or interruption. After eliminating the fault, the error code will be automatically deleted.
E.02	Fault CT connection monitoring during manual self test. Appropriate action: Check CT connection for short-circuit or interruption. After eliminating the fault, the error code will be automatically deleted.
E...	Appropriate action when error codes > 02 occur: Appropriate action: Carry out a reset. Reset the device to factory setting. After eliminating the fault, the error code will be automatically deleted. If the fault continues to exist, please contact the Bender Service.

6.3 Technical data

()* = factory setting

Insulation coordination acc. to IEC 60664-1/IEC 60664-3

RCMA423-D-1

Rated insulation voltage	100 V
Overtoltage category/ pollution degree	III/3
Rated impulse voltage	2.5 kV

RCMA423-D-2

Rated insulation voltage	250 V
Overtoltage category/ pollution degree	III/3
Rated impulse voltage	4 kV

Supply voltage

RCMA423-D-1

Supply voltage range U_s (acc. AS/NZS 2081:2011)	AC 32...60 V / DC 19.2...78 V
Operating range U_s	AC 16...72 V / DC 9.6...94 V
Frequency range U_s	DC, 42...460 Hz

RCMA423-D-2

Supply voltage range U_s	AC/DC 140...250 V
Operating range U_s	AC/DC 70...300 V
Frequency range U_s	42...460 Hz

Protective separation (reinforced insulation) between	(A1, A2) - (k/I, T/R) - (11, 12, 14) - (21, 22, 24)
Voltage test according to IEC 61010-1	2.5 kV/1 Min.
Power consumption	≤ 6.5 VA

Measuring circuit

External measuring current transformer	CTUB101-CTBC20...210(P) series
Rated insulation voltage (measuring current transformer)	800 V
Operating characteristic acc. to DIN EN 62020 and IEC 60755	Type B
Rated frequency	0...1000 Hz

Relative uncertainty for f	
≤ 2 Hz	0 . . . -35 %
$> 2 \dots < 16$ Hz	-35 % . . . +100 %
$\geq 16 \dots \leq 1000$ Hz	0 . . . -35 %
$> 1000 \dots \leq 2000$ Hz	± 35 %
Operating uncertainty	± 17.5 %

Response values

Rated residual operating current $I_{\Delta n1}$ (prewarning, AL1)	50 . . . 100 % of $I_{\Delta n2}$ (50 %)*
Rated residual operating current $I_{\Delta n2}$ (main alarm, AL2)	100 mA . . . 5 A (100 mA)*
Hysteresis	10 . . . 25 % (15%)*

Specified time

Start-up delay t	0 . . . 10 s (0.5 s)*
Response delay t_{on1} (prewarning)	0 . . . 10 s (1 s)*
Response delay t_{on2} (main alarm)	0 . . . 10 s (0 s)*
Delay on release t_{off}	0 . . . 99 s (1 s)*

The actuating times depend on the rated frequency:

Operating time t_{ae} for $I_{\Delta n} = 1 \times I_{\Delta n1/2}$ ($\geq 50 \dots \leq 1000$ Hz)	≤ 50 ms
Operating time t_{ae} for $I_{\Delta n} = 2 \times I_{\Delta n1/2}$ (< 50 Hz)	≤ 50 ms
Response time t_{an}	$t_{an} = t_{ae} + t_{on1/2}$
Recovery time t_b	≤ 300 ms

Displays, memory

Display range, measured value AC/DC	0 . . . 9.6 A
Error of indication	± 17.5 % / ± 2 digit
Measured-value memory for alarm value	data record measured values
Password	off / 0 . . . 999 (off)*
Fault memory alarm relay	on / off (on)*

Inputs/outputs

Cable length for external test / reset button	0 . . . 10 m
---	--------------

Cable lengths for measuring current transformers

Connection CTX . . . (see ordering information on page 41)	1 m / 2.5 m / 5 m / 10 m
or alternatively: single wire 6×0.75 mm ²	0 . . . 10 m

Switching elements

Number of switching elements	2 x 1 changeover contact
Operating principle	N/C operation / N/O operation (N/C operation)*
Electrical endurance, number of cycles	10000
Contact data acc. to IAS/NZS 2081:2011	
Utilisation category	AC-13.....AC-14.....DC-12.....DC-12.....DC-12
Rated operational voltage	230 V 230 V 24 V 110 V 220 V
Rated operational current	1 A.....0.6 A.....0.2 A.....40 mA.....20 mA
Minimum contact load (relay manufacturer's reference)	10 mA/5 V DC

Environment / EMC

EMC	DIN EN 62020:2005-11, AS/NZS 2081:2011
Operating temperature	-25...+55 °C
Classification of climatic conditions acc. to IEC 60721 (no condensation, no formation of ice)	
Stationary use (IEC 60721-3-3)	3K23
Transport (IEC 60721-3-2)	2K11
Long-term storage (IEC 60721-3-1)	1K22
Classification of mechanical conditions acc. to IEC 60721	
Stationary use (IEC 60721-3-3)	3M11
Transport (IEC 60721-3-2)	2M4
Long-term storage (IEC 60721-3-1)	1M12

Connection

Connection type	screw-type terminals
Connection properties	
rigid/ flexible/ conductor sizes	0.2...4/0.2...2.5 mm ² / AWG 24...12
Multi-conductor connection (2 conductors with the same cross section)	
rigid, flexible	0.2...1.5/0.2...1.5 mm ²
Stripping length	8...9 mm
Tightening torque	0.5...0.6 Nm (5...7 lb-in)

Connection type	push-wire terminals
Connection properties	
Rigid	0.2 ... 2.5 mm ² (AWG 24 ... 14)
Flexible without ferrules	0.75 ... 2.5 mm ² (AWG 19 ... 14)
Flexible with ferrules.....	0.2 ... 1.5 mm ² (AWG 24 ... 16)
Stripping length	10 mm
Opening force	50 N
Test opening, diameter.....	2.1 mm

Other

Operating mode	continuous operation
Position of normal use	display-oriented
Degree of protection, internal components (IEC 60529).....	IP30
Degree of protection, terminals (IEC 60529)	IP20
Enclosure material	polycarbonate
Flammability class	UL94V-0
DIN rail mounting acc. to.....	IEC 60715
Screw mounting	2 x M4 with mounting clip
Software version	D441 V1.1x
Weight.....	≤ 150 g

(*) = factory setting

6.4 Standards, approvals and certifications



AS/NZS 2081:2011 "Electrical protection devices for mines and quarries"

6.5 Ordering information

	RCMA423-D-1	RCMA423-D-2
Response range $I_{\Delta n}$	100 mA...5 A	100 mA...5 A
Rated frequency	0...1000 Hz	0...1000 Hz
Supply voltage U_s^*	DC 9.6...94 V / AC 42...460 Hz, 16...72 V	DC 70...300 V / AC 42...460 Hz, 70...300 V
Art. No. (B7... = push-wire terminal)	B74043045	B74043046
*Absolute values of the voltage range		

External measuring current transformers

Type	Inside diameter (mm)	Shielded	Art. No.
CTUB101-CTBC20	20 mm	—	B78120010
CTUB101-CTBC20P		X	B78120020
CTUB101-CTBC35	35 mm	—	B78120012
CTUB101-CTBC35P		X	B78120022
CTUB101-CTBC60	60 mm	—	B78120014
CTUB101-CTBC60P		X	B78120024
CTUB101-CTBC120	120 mm	—	B78120016
CTUB101-CTBC120P		X	B78120026
CTUB101-CTBC210	210 mm	—	B78120018
CTUB101-CTBC210P		X	B78120028

Measuring current transformer connecting cable

Type	Length (m)	Art. No.
CTX-100	1	B98110080
CTX-250	2,5	B98110081
CTX-500	5	B98110082
CTX-1000	10	B98110083

RCMA423AS accessories

Mounting clip for screw mounting (1 piece per device) B 9806 0008

6.6 Document revision history

Date	Document version	State/Changes
09.2021	02	<i>Editorial revision</i> Chapter 4.: Wiring diagram Chapter 6.3: relative uncertainty for f , min. contact load Chapter 6.5: Ordering details CTUB... <i>Added</i> Chapter 6.4: Logo UKCA
11.2021	03	<i>Editorial revision</i> Chapter 6.3: Specification EMC standards

INDEX

A

- Adjustable parameters, list 20
- Automatic self test 13

D

- Delay on release toff 15
- Deleting the fault alarms 19
- Device features 12
- Display elements 18
- Display in standard mode 21

E

- Enter key 19
- Error codes 40
- Example of parameter setting 24

F

- Factory setting 15, 33
- Function 12
- Functional faults 14

H

- How to use this manual 5

I

- Installation and connection 16
- Intended use 11

K

- K1/K2: assignment alarm category 20

L

- LED Alarm 1 lights 19
- LED Alarm 2 lights 19

M

- Manual self test 13
- Measuring current transformer connecting cable 40
- Measuring current transformer types 40
- Menu
 - AL (response values) 20
 - HiS (history memory for the first alarm value) 21
 - InF (hard and software version) 21
 - Set (device control 21
 - t (timing check) 21
- Menu structure, overview 20

O

- Operating elements, function 18
- Operation and setting 18
- Ordering information 39

P

- Parameter query and setting, overview 22
- Parameter setting

- Activating or deactivating the password protection 30
- Activating the fault memory 26
- Assigning alarm categories to the alarm relays 27
- Changeover from overcurrent operation to window operation 30
- Set response values 25
- Setting the time delays 29

Password protection 15

R

Reset button 19

Residual current monitoring in window discriminator mode 15

Residual operating current ranges of the different measuring current transformers 39

Response delay ton 14

S

Select the appropriate parameter for response values

- 22

Service 6

Set response values

- Hysteresis 25
- Overcurrent ($> I$) 25

Setting the number of reload cycles 26

Starting delay t 14

Starting the menu mode 19

Support 6

T

Technical data 35

Test button 19

Training courses 7

W

Window operation 30

Wiring diagram 17

Work activities on electrical installations 10

Workshops 7



Bender GmbH & Co. KG

PO Box 1161 • 35301 Grünberg • Germany
Londorfer Strasse 65 • 35305 Grünberg • Germany
Tel.: +49 6401 807-0 • Fax: +49 6401 807-259
E-Mail: info@bender.de • www.bender.de

Photos: Bender archives



BENDER Group